
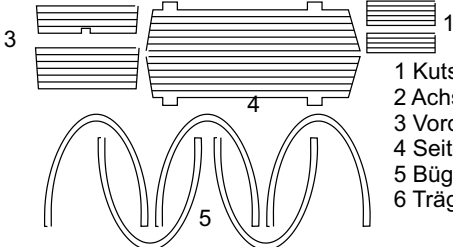


- 1 Kutschbock Coachman
- 2 Achshalter Axle holder
- 3 Boden Bottom
- 4 Seitenwände side walls

Die Achshalter unter den Wagenboden kleben.  
 Die Kerbe ist vorne.  
 Die Achsen in je ein Rad von der glatten Seite her einkleben.  
 Nicht kürzen!  
 Den Kutschbock zusammenkleben. Das breite Brett als Sitzfläche, das schmale als Lehne ankleben.  
 Die Seitenwände an den Wagen kleben.  
 Die Achsen vorsichtig in die Halter einführen.  
 Die restlichen Räder aufkleben und die Achsen kürzen.

Glue the axle brackets under the car floor.  
 The notch is in the front.  
 Glue the axles into one wheel each from the smooth side.  
 Do not shorten!  
 Glue the driver's seat together. The wide board as  
 Glue on the seat, the narrow one as a backrest.  
 Glue the side panels to the car.  
 Carefully insert the axles into the holders.  
 Glue on the remaining wheels and shorten the axles.

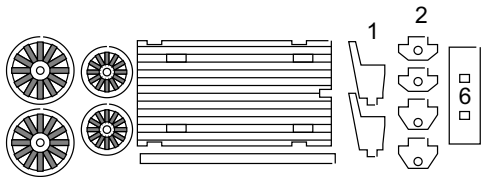

- 1 Kutschbock Coachman
- 2 Achshalter Axle holder
- 3 Vorder- und Rückwand front and back panels
- 4 Seitenwände Side walls
- 5 Bügel für Plane brackets for tarpaulin
- 6 Träger für Kutschbock carriers for driver's box

Die Achshalter unter den Wagenboden kleben,  
 die großen vorn, die kleinen hinten. Die Kerbe ist vorne.  
 Die Achsen in je ein kleines und ein großes Rad  
 von der glatten Seite her einkleben. Nicht kürzen!  
 Den Kutschbock zusammenkleben. Die Seitenteile  
 in den Träger kleben. Das breite Brett als Sitzfläche,  
 das schmale als Lehne ankleben. Die Seitenwände  
 an den Wagen kleben. Vorder- und Rückwand einkleben.  
 Die Achsen vorsichtig in die Halter einführen, kleines Rad vorne.  
 Die restlichen Räder aufkleben und die Achsen kürzen.  
 Den Kutschbock einkleben. Die Bügel für die Plane ein-  
 kleben.

Glue the axle brackets under the floor of the car, the big ones at the front,  
 the little ones at the back. The notch is in the front. The axles each have a small  
 and a large wheel. Glue in from the smooth side. Do not shorten!  
 Glue the driver's seat together. The side panels glue in the carrier.  
 The wide board as a seat, glue on the narrow one as a backrest.  
 The side walls stick to the car. Glue in the front and back panels.  
 Carefully insert the axles into the holders, small wheel in front.  
 Glue on the remaining wheels and shorten the axes.  
 Glue in the driver's seat. Glue the brackets for the tarpaulin.